

Viseum Intelligent Moving Cameras

Quick Start User Guide using the Graphical User Interface (GUI)

Viseum[®] Version v2.2

Multiple Installation Management

Each Viseum IMC installation is identified using a unique name (usually chosen on purchase) which can always be seen in your web browsers title bar when navigating any page of your Viseum IMC system.

Account Details

Each Viseum IMC is shipped along with its unique user account details. It is advisable that these are to hand when trying to access the system.

Logging In

- Enter the IP address or URL of the Viseum system into the browser address bar.
- Input username and password
- Click “login”

Viewing Live Cameras

- **View all cameras**

Click the “ALL” button at the bottom left of the front page.

- **View individual cameras**

Click on one of the camera buttons at the bottom left of the front page.

- **Return to Front or Home Page**

From any page click on the left arrow button located on the bottom already on the home page and this button is clicked then this will log



right of any page. Note if you are you out of the GUI.

Controlling the PTZ Manually



On this page a fixed camera will appear on the left and the PTZ on the right.

Use the numbered buttons at bottom left to select the appropriate fixed contextual view camera if required.

- **Using the GUI control dial**




on the right of the page. The PTZ can now be manually controlled with a circular PTZ control dial.

The outer ring (brown with yellow arrows) provides direction control.

The horizontally divided centre button marked F/S selects fast or slow PTZ camera movement.

The vertically divided ring surrounding the centre button controls Zoom - the right sector (“+”) Zooms in and the left sector (“-“) Zooms out.

The PTZ will record everything when in manual control mode but this can be toggled off and back on by clicking the  button just below the control dial.

- **Move the camera faster with “Point and Click”**

Click on any point on the fixed contextual view image to automatically move the PTZ camera to that point.

Reviewing Recorded Evidence



Click

The system displays a usage graph for each camera of all the activity the system has recorded over the past 30 days.

Clicking on any date on any point on the graph of any cameras activity will take you to the nearest event recorded at that time from that chosen camera. Alternatively, the appropriate "Go to Last Event" button will take you direct to the last event recorded by that camera.

- **Navigating to events**

Up to eight image thumbnails represent the entire event. The start time and duration is displayed on the top left of the page. You can reduce the length of an event by ticking the small checkbox at the bottom right of the first and last images of each thumbnail of interest, and then click the "Go" button. This process can be repeated as many times as required.

Enter the required time and/or date in the Event Start Time box at bottom left of the screen window, or

Click the left or right double arrow button to jump to the previous or next event as many times as needed, or

Click on either of the activity graphs on the bottom right of the screen.

- **Play or watch events online**

You can select a movie of your chosen event or of any periods of time from any 1 of the cameras in the following ways. For speed, events can be reviewed in either of the following ways:



- Plays immediately but you will not have any control



- Takes time to prepare but allows control to skip back % forth.

- **Downloading evidence**



and wait for prompt to open or save the file.

Camera – choose any 1 of the desired cameras

Start / Finish – Input any time and date (the start and finish time of the selected event will be shown as default).



Format – select the download file format (this selections default is only used unless otherwise instructed)

Download – choose either "Review (fast)" low quality images or "Court Evidence (slow)" for full-frame images.


- **Searching/Saving still images**

Click the small magnifying glass icon at the bottom left of your chosen thumbnail. Use the left and right arrows to move forwards or backwards along the sequence of stills to get to the most suitable still. Once you have located the most suitable image click the "save" or "print" button and you will be presented with an appropriate prompt.


Bookmarking Evidence

- Click  and name the event in the "Name" dialogue box, then lick  to complete.

- **Viewing bookmarks**

Click  button on the top right of any page within the "Evidence" section to select any one of the bookmarked events.

Fixed Camera Masking

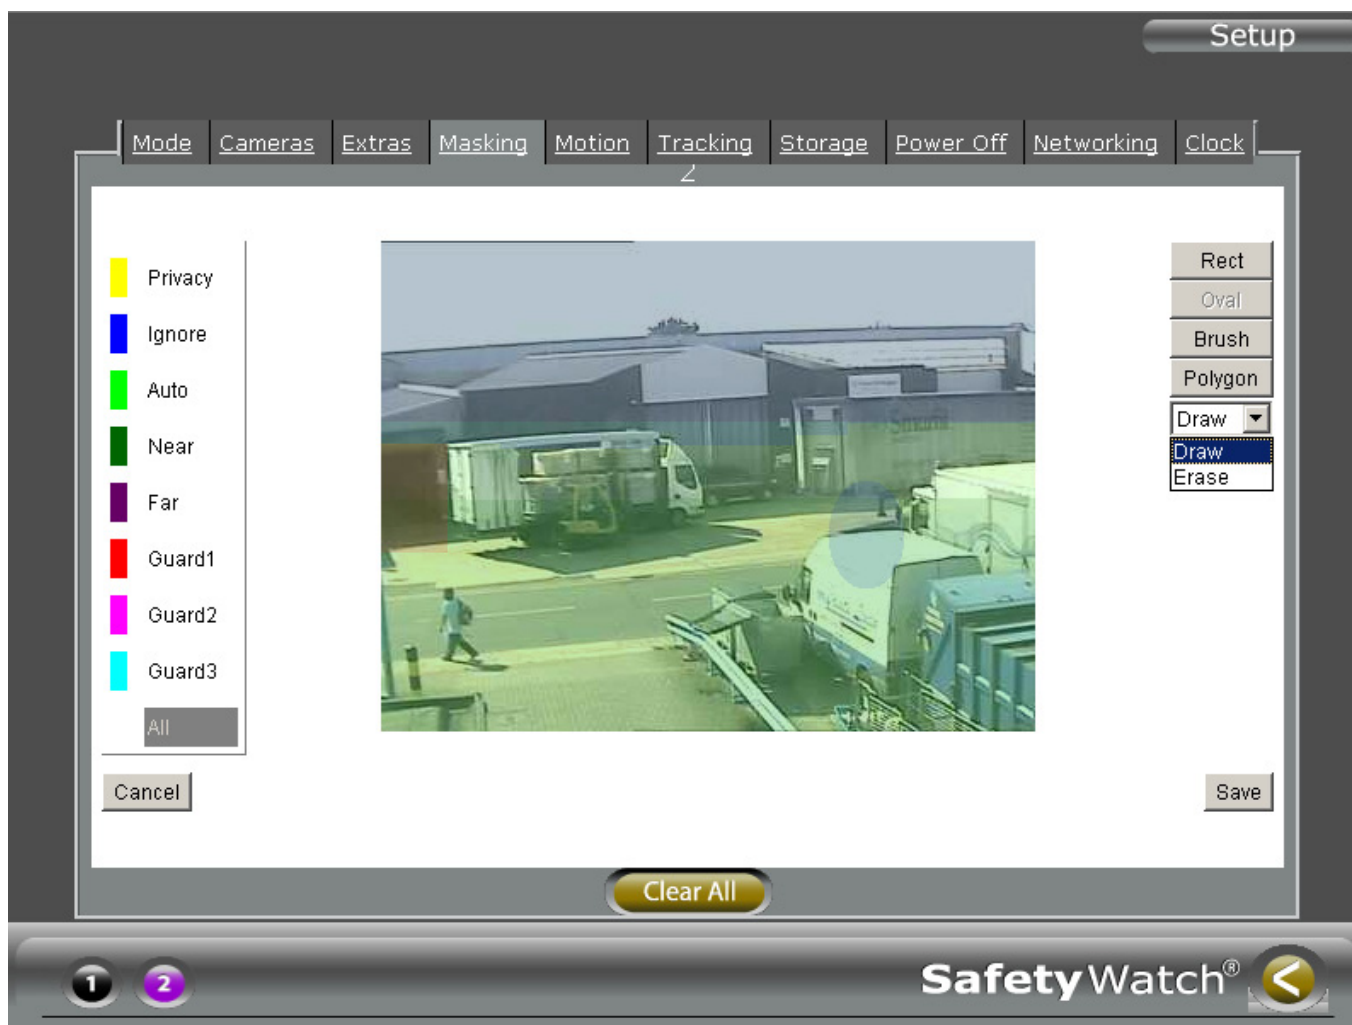

Standard operations usually require the “Ignore” mask and sometimes the “Privacy” mask.

The “guard” masks are used to prioritise certain areas over others.

All other masks are used by Viseum’s Remote Managed Support Services (RMS).

- Select your desired mask on the left of the screen by clicking on the title of the mask.
- Input your mask by dragging your mouse over the desired area
- You can toggle the draw or erase masking tool by selecting it from the drop down menu on the right
- Click Save when complete